



Assembly Instructions



1. **Open the carrying bag and remove the Ridge banner stand and graphic panel.**
2. **Join the three tension poles and join them together by sliding the open end of the top pole into the aluminum coupling on the middle and bottom poles.**
3. **Remove the plastic cap from the end of the bar attached to the top of your graphic. Slide the top of the tension pole onto the bar and replace the plastic cap.**
4. **Remove the plastic cap from the end of the bar attached to the bottom of your graphic panel. Slide the base assembly onto the bar and replace the plastic cap.**
5. **Flex the tension pole and slide the bottom of the pole into the base assembly.**

Your display is ready for business!

6. **To repack: Pull tension pole out of the base assembly. Place the Ridge unit and graphic panel on the floor. Remove tension pole from the top and bottom bars. Disconnect the tension pole and place Ridge banner stand and graphic panel in carrying bag.**

1.



2.



2.



3.



3.



3.



4.



4.



4.



5.



5.



5.

